

## Outlook Master Station Operation

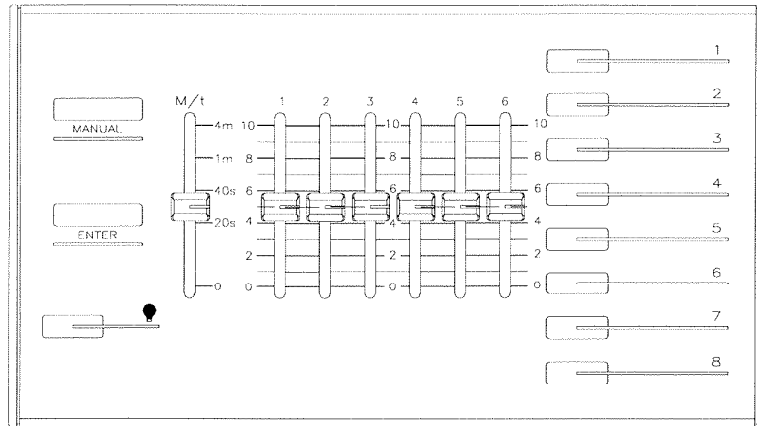




Figure 27. Outlook Master Station


**Recalling a Preset** To recall a lighting preset press one of the 8 preset buttons located on the right side of the station. The preset LED will turn on indicating the preset is active. If the same preset is re-selected it will activate preset OFF and the OFF LED will illuminate.

1. Press 

**Manual Control Using Sliders** To manually adjust the lighting levels from the sliders:

1. Press 

2. Adjust the master  slider

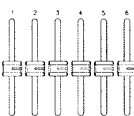
3. Adjust the channel  sliders.

## Turning Lights Off


To fade lights to off (or blackout):

Press 

or


Press a currently selected  1-8

or

1. Press 


2. Lower channel sliders

or master slider to zero %




## Recording Slider Levels


To record the slider levels into a preset for later pushbutton recall:

1. Press 


2. Adjust master slider



3. Adjust Channel sliders

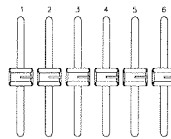

4. Press  †

† To exit record mode press 


(or a 10 second time-out is provided)

5. Press  1-8


## Preset Mastering

To temporarily reduce the overall levels of a preset lighting scene:

1. Press 

2. Press and hold  until LED flashes

3. Adjust master slider





## Copying a Preset

To copy one preset lighting scene to another:


1. Press 

2. Press and hold until LED flashes

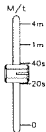3. Adjust master slider  as required



4. Press  †


† To exit record mode press   
(or a 10 second time-out is provided)

5. Press 


## Recording Blind

To record a preset lighting scene without modifying the current lighting levels:

1. Adjust the master slider




and channel sliders

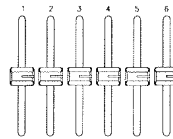

without selecting



2. Press  †

† To exit record mode press 

(or a 10 second time-out is provided)

3. Press 

*Recording a preset from an Outlook Station will record the current lighting levels which may be derived from Outlook in addition to other control sources connected to the dimmer. Record blind records the Outlook slider settings only.*


## Recording Fade Times

A fade time is the time taken for lighting levels to fade from one scene to another, which for Outlook are adjustable from 0 (instant) to 4 minutes.

To record a preset and \*manual fade time:


1. Press and hold  until LED flashes

2. Adjust fade time slider






3. Press  to record a preset fade time


-or-

Press  to record an Off (blackout) fade time

-or-

Press  to record a manual fade time for the room (the time taken for channels to fade from their current level to the levels set on the sliders when  is selected)

4. Re-adjust  if required and repeat from (3) for recording other fade times

5. Press  to exit record mode


(A 10 second time-out is provided)

### Record Lockout

To lock out the record facility preventing unauthorized modification of preset levels and fade times:

Press  and  together and hold

Continue to hold until the LED's go off


 will no longer respond to an attempted record action

### Record Enable

To cancel record lockout preset levels and fade times:

Press  and  together and hold



Continue to hold until the LED's come on

 will now respond to a record action


### Total Lockout

This function locks out all other Master, Remote, Fader, Infra-Red and Audio-Visual stations assigned to the same room although they will continue to mimic commands from the remaining active station.

*Room Combination stations are not affected by total lockout*

Press  and  together and hold

Continue to hold until LED flashes.

All other stations are locked while the  LED flashes.

### Cancel Total Lockout

Press  and  together and hold

Continue to hold until  stops flashing

Stations are now unlocked

## Outlook Slider Station Operation

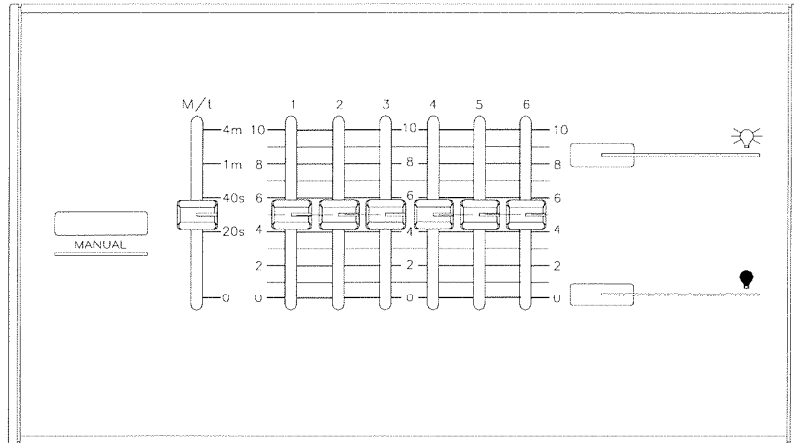



Figure 28. Outlook Slider Station

### Manual Control Using Sliders


To Manually adjust the lighting levels from the sliders:

1. Press 

2. Adjust master slider



and channel sliders

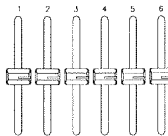


### Turning Lights On


Press 

**Turning Lights Off**


Press 

-or-

1. Press 

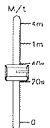2. Adjust master slider  to zero %


-or-

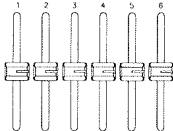adjust channel sliders  to zero %



---

## Outlook Preset Station Operation

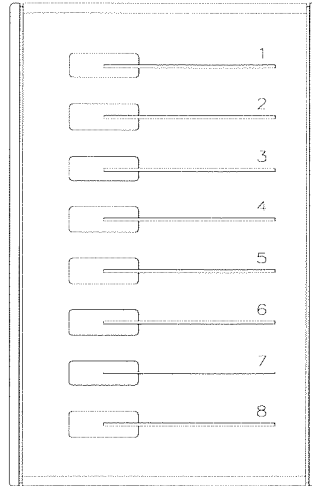

**Figure 29. Outlook Preset Station**


### Recalling a Preset

To recall a preset lighting scene press:



### Turning Lights Off

To fade lights to off (or blackout):

Press a currently active  1-8